



User Manual



MA-1212 Professional Mixer/Amplifiers

Electro-Voice®

Table of Contents

<i>Typical Connections</i>	3
<i>Features</i>	2
<i>Description</i>	2
<i>Installation</i>	3
<i>Grounding</i>	3
<i>Ventilation</i>	3
<i>Key Input Connections</i>	3
<i>Typical Connectors</i>	4
<i>Output Connections</i>	6
<i>High Impedance/Constant-Voltage Systems</i>	7
<i>Operation</i>	8
<i>Front Panel Controls</i>	8
<i>Rear Panel Controls and Connections</i>	9
<i>Appendix A: Limited Warranty</i>	13
<i>Exclusions and Limitations</i>	13
<i>Obtaining Warranty Service</i>	13
<i>Other Rights</i>	13
<i>Appendix B: Safety Guidelines</i>	14
<i>AC Power Supply</i>	14
<i>DC Power Supply</i>	14
<i>Safety Precautions</i>	14
<i>Technical Specifications</i>	16

Features

- Level controls for each input and a master volume control.
- Individual bass and treble tone controls.
- Automatic muting circuit with threshold adjustment.
- 600 ohm transformer-isolated line input for paging, with automatic muting of all other inputs.
- Low distortion.
- Output protection circuit.
- Auxiliary line level inputs with internal mixing for stereo source.
- Balanced line level output.
- Insertion point between preamp and amplifier.
- Phantom power on all microphone inputs enables microphones to be used without separate power supplies.

Description

The Electro-Voice MA series of mixer-amplifiers are available with output power ratings of 60 (MA-1206) or 120 (MA-1212) watts. The MA series products provide background music and allow paging in environments such as churches, small businesses, and professional offices.

The MA inputs include 10 combination balanced or unbalanced Microphone/AUX level connections, 2 stereo AUX summing inputs, telephone paging and Power Amp In connections. Inputs to Mic 1 can be set to automatically mute the other Mic and AUX level input channels.

Input sources to Aux 1 and 2 may include: tape players, compact-disc players, AM/FM tuners, mixer-preamplifiers or wireless microphones.

The telephone paging input accepts the signal from a standard 600 ohm paging line.

The Power Amp In jack, along with the Preamp Out jack, is provided to insert an equalizer or other signal processing device before the power amplifier.

The amplifier includes protection circuitry to prevent damage from either open or shorted speaker lines.

An adjustable automatic muting circuit mutes all other inputs when the paging input is activated.

Installation

To avoid hum in the output, be certain that all input cables are physically separated from power wiring and transformers. Speaker cables should also be kept away from input cables and power cables.

An example of what sources and output devices would be connected to this unit is shown in Figure 1.

Grounding

Ground the chassis of the unit by using the ground terminal located on the back panel. For the best grounding, connect the amplifier to an earth ground such as a cold water pipe or ground rod. If additional equipment is installed along with the amplifier, make sure their chassis are connected together to reduce noise and hum.

Ventilation

To remove the heat generated by the power amplifier, provide ample ventilation around the unit. Avoid blocking or impeding the vent slots in the cabinet.

Locate the unit where it is free from direct sunlight, humidity, dust and vibration.

Key Input Connections

Microphones. The Mic inputs are for use with balanced Low Impedance (approximately 200 ohms) or unbalanced high impedance (approximately 20k ohms) microphones. For high impedance microphones, cables should be as short as possible in order to avoid loss of High Frequency response. The results will vary with the microphone and cable capacitance. However, a limit of 30 feet is recommended.

The Mic inputs may be accessed by either XLR connectors or ¼" phone plugs.

Figure 2 shows the wiring configurations of both unbalanced and balanced microphones using either ¼" or XLR type connectors.

Typical Connections

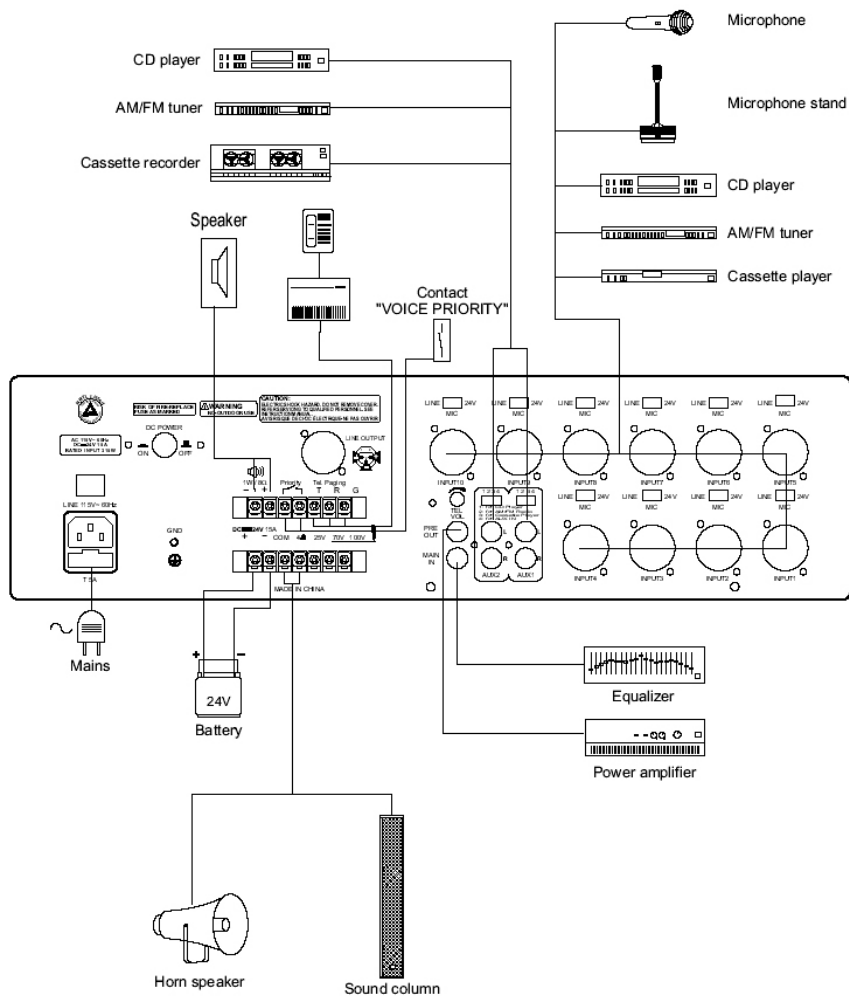


Figure 1:
Typical Connections

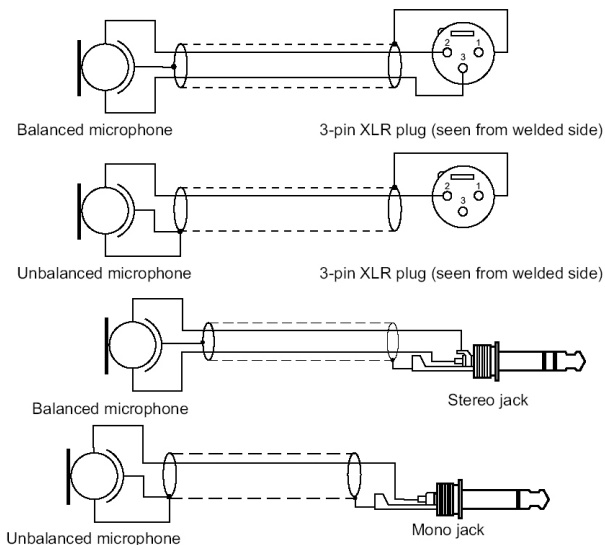


Figure 2:
XLR and Jack Inputs

Figure 2 shows the wiring configurations of both unbalanced and balanced microphones using either 1/4" or XLR type connectors.

Phantom Power: Phantom power allows the use of microphones without separate power supplies on the Mic inputs. When phantom power is on, 24 V dc is produced at pins 2 and 3 on the Mic inputs. To enable phantom power simply move the selector switch to the 24v position above the desired input connector.

Microphone auto muting input: When a microphone or other source is connected to input 1 and the front panel mute switch in the on position, advance the threshold control to the point where the typical voice, and not noise in the room, will operate the mute circuit. The microphones on/off switch may be on, with the actual voice announcement triggering the mute. If you want to defeat the muting function, place the mute switch in the off (defeat) position.

Auxiliary 1 and 2: High-level unbalanced sources may be connected to the Aux 1 and 2 jacks on the back panel.

Appropriate sources include a tape player, compact-disc player, AM/FM tuner, mixer-preamplifier, wireless microphone or turntable equipped with a ceramic or crystal cartridge. Use a single-conductor shielded cable. Turntables usually have a separate ground wire. Connect this wire to the ground terminal on the back panel to minimize hum.

The set of RCA jacks (R and L) provided on the AUX 1 and 2 inputs are designed to match to the two outputs of the typical stereo source. The jacks are in parallel through internal series resistors and mix both channels. The series resistors are chosen to avoid undesirable loading effects on the output stage of typical stereo sources.

Plug monaural high-level unbalanced sources into either the R or L jacks.

Paging: The voice paging signal from a 600 ohm balanced audio paging line (such as a PBX system) may be connected to the aux paging input on the back panel.

Power Amp In: The Power Amp In jack provides direct access to the power amplifier. It requires a line-level signal fed through a RCA type phono plug wired with a single-conductor shielded cable.

Output Connections

The amplifier can accommodate both Low Impedance and high impedance constant-voltage speaker loads (25, 70.7, and 100 volt lines). There are several considerations in the connection of a speaker or multiple speakers to an amplifier:

1. Matching speaker impedance to the amplifier's rated Impedance: In general, power amplifiers deliver rated power into a rated load impedance. Lower impedances reduce the maximum available power available at rated distortion. Significantly lower impedances may cause the amplifier's protection fuses to open, especially at high volume levels. These low impedances should be avoided.

2. Power loss in speaker wire: The impedance of the speaker connecting wire would ideally be zero, so all of the amplifier output power can be delivered to the speaker load. However, the impedance of a longer speaker wire installation can become a significant proportion of the total impedance. Thus, part of the amplifier power is lost in the wire and the power to the load is reduced. Wire impedance is highest for the longest wire runs and smallest wire sizes.

Table 1 shows the two wire cable (copper) lengths permissible for a number of wire sizes and speaker impedances to avoid a loss of more than 0.5 dB. For a 1 dB loss (basically imperceptible), double the wire lengths. For a 2 dB loss, multiply the lengths by 4.4.

In general, note that high load impedances allow the use of longer, smaller gauge wiring.

3. Balancing relative speaker levels: There is no easy, electrically efficient way to balance and adjust the sound levels among multiple speakers in a low impedance installation. Constant-voltage high impedance systems ease this process because they typically employ speakers equipped with transformers with multiple input taps marked in watts.

Low Impedance Speakers. The low impedance ohm output terminal is provided for direct connection of one or more standard low impedance speaker systems. For example, connect a single speaker system to the common and 4 ohm terminals. Correct connection of several low impedance speakers must follow the rules of proper series and parallel impedance summation.

High Impedance/Constant-Voltage Systems

Installations that require high impedance speaker loads permit smaller diameter wire for a given power loss in the speaker lines. Usually, low impedance speakers are still used in such systems, but transformers are used at the speaker locations to increase the impedance to the desired value. Multiple transformer taps, labeled in watts, permit easy adjustment of the individual speaker levels. Use simple parallel connection of the transformer primaries (inputs). This eliminates the determination of load impedance and series-parallel speaker connections.

For proper operation, all speakers should have transformers with the same voltage rating, i.e. 25, 70.7, or 100 volts. The total of all the power taps should be equal to or less than the amplifier's rated output power.

When the total equals the rated power, the amplifier may deliver rated power to the load, depending on the input signal levels. Totals less than the rated amplifier output will not damage the amplifier since the resultant load impedance is higher than the amplifier's rated impedance and thus only reduces the power delivered at maximum amplifier level. However, avoid power totals greater than rated amplifier power, since the total load impedance drops below the amplifier's rated load.

Preamp Out: The Preamp Out jack provides a line-level mix of the input signals, fed through a 1/4 inch phone plug wired with a single-conductor shielded cable.

Use the signal at the Preamp Out jack to feed an external equalizer or signal processor whose output would connect to the Power Amp In jack.

The preamplifier output may also be used alone to drive an additional external power amplifier with its own set of speakers. When the Preamp Out jack is used, the mixed signal to the internal power amplifier is interrupted.

The balanced line level XLR output connector is ideal for feeding an external recording device or assistive listening system. When the rear panel switch is in the “fixed” position, the master volume control does not affect the level at this line out jack, which permits setting the tape recorder’s input level independent of system volume. The tape output is buffered, so that an improper load will not affect system performance.

Operation

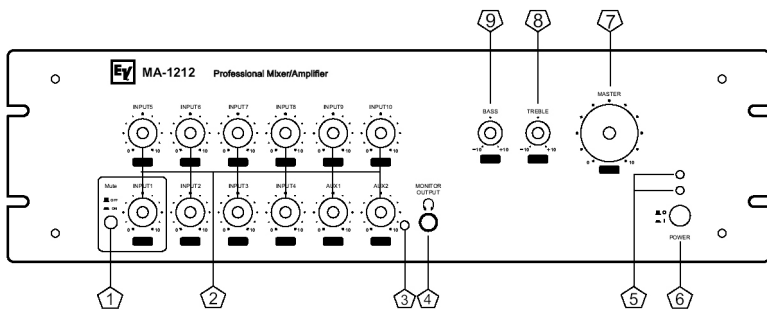


Figure 3:
Front Panel Layout

Front Panel Controls

(Refer to Figure 3)

1. “Mute” function switch: This switch lets you turn the “Voice Priority” or page “ducking” function on or off of input 1 (1).
2. Auxiliary 1&2 : These controls adjust the level of the two stereo summing auxiliary inputs. Input 1-10: These controls adjust the levels of the 10 multi-use inputs.
3. Music signal monitor output level control: This control is a screwdriver adjustment and lets you individually set the volume of a headphone that is connected to the “MONITOR OUTPUT” (4) or a small speaker connected to the 1w 8 ohm terminals on the rear panel (25). Turning the control clockwise increases the volume of the corresponding source.

Front Panel Controls (cont')

5. Overload indicator light: When the amplifier's output overloads the "OVER LOAD" indicator illuminates and interrupts the output signal. The output will resume when the volume is lowered or the offending load is removed from the output line.
6. Power Switch and Power Indicator: This switch supplies power to the unit. The power indicator lights when power is applied to the unit.
7. Master: This control adjusts the level of the combined input signals to the power amplifier.
8. Treble: This control adjusts the high frequency response by providing up to 7 dB of boost or 12 dB of cut at 10 kHz.
9. Bass: This control adjusts the low frequency response by providing up to 7 dB of boost or 12 dB of cut at 100 Hz.

Rear Panel Controls and Connections

(Refer to Figure 4)

10. Main cord connector: This connector is for the connection of the supplied AC line cord.
11. AC fuse: The fuse can only be changed, in the event of a fault or changing the supply voltage. This service should only be done by an EV service center.
12. "GND" screw: In case the main outlet does not provide a ground conductor, this screw offers the possibility to ground the amplifier's metal parts.

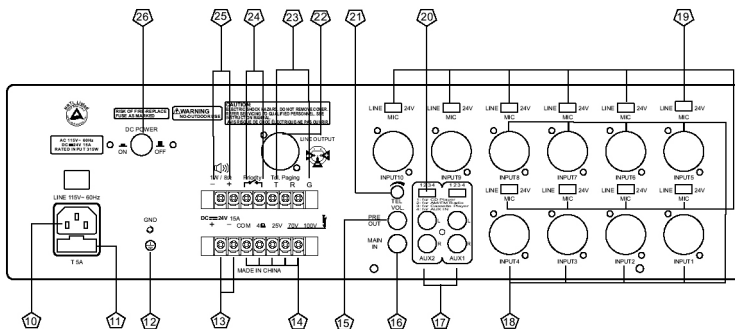


Figure 4:
Rear Panel Layout

Rear Panel Controls and Connections (cont')

13. Terminals for the DC battery supply: These two terminals allow the connection of an external 24V DC power supply such as a 24V battery. Operation of the amplifier is maintained even during a power outage, since it is automatically switched to the DC power source.
14. Output terminals: All speaker connections are made here. 25v/70v/100v and low impedance speaker connections are supported. For additional information on constant voltage and low impedance speaker hookups see section 4 "Output Connections".
15. "PRE OUT" terminal: This terminal output provides the mixed audio signals of all sources that are connected to the amplifier and can be utilized to feed an external power amplifier, a signal processor or any other external appliance. The unbalanced signal is affected by the individual input controls. Before using the PRE OUT you have to remove the bridging-strip between this binding post and the "MAIN IN" terminal (16).
16. "MAIN IN" terminal: After removing bridging-strip between the "PRE OUT" and the "MAIN IN" terminals you can include an external signal processor in the audio-chain between the pre-amplifier and the power output stage of the power amplifier.
17. "AUX 1" and "AUX 2" inputs: These two RCA-type connectors let you connect the two channels of an external high-level unbalanced signal source. Such as an AM/FM tuner, a cassette deck, a CD player, etc.. An input level switch(20) is provided to properly balance the input sensitivity with a variety of sources.
18. INPUT 1- 10 jacks: These ten balanced/unbalanced combination type jack (XLR and 6.3mm) inputs are meant for the connection of-condenser type microphones that accepts 24V phantom power, dynamic microphones (30-600ohms) or a high level sound sources (e.g AM/FM tuner, cassette deck, CD player, etc.)

Note: Connecting unbalanced microphones to the appliance when the phantom is switched on could lead to severe damage to the microphones and is therefore not advisable. It is absolutely mandatory to only plug or unplug a microphone cable with the phantom power turned off. Also make sure that the phantom power is turned off when utilizing microphones that are not meant to be operated with phantom power. The voltage that is present on pin2 and pin3 of the XLR-connector could lead to severe damage to the microphones. When in doubt, contact your dealer before you perform any connections.

19. **INPUT 1-10 sensitivity switches:** By moving these switches onto the "LINE" position the corresponding input can be connected to an audio source with high level signal output. By turning these switches onto the "MIC" position, the corresponding input can be connected to a dynamic microphone with low impedance. By turning these switch onto "24V" position, connects the 24V phantom supply on XLR of pin2 and pin3 of inputs, necessary to operate a condenser type microphone which require this type of external supply. It is recommended to operate this switch only when the master volume set on minimum.
20. **AUX1-2 input sensitivity switch:** By turning switch onto the "1" position, the "AUX 1" , "AUX 2" input is suitable for connecting to a CD player signal. The "2" position, is best used for an AM/FM tuner signal output. By turning this switch onto the "3" position, the "AUX1" "AUX2" input is balanced for a desktop cassette player signal output. The "4" position, provides the best match for high-level signal outputs.
21. **TEL. Paging input level control:** This control let you set the volume of the sound source that is connected to the "Tel. Paging" (23) terminals. Turning the control clockwise can increase the volume of the corresponding source. We recommend to leave the control at it's minimum setting "0" when it is not used.
22. **LINE OUTPUT CONNECTOR:** This XLR balanced output mixes audio signals of all sources that can be utilized to feed an external tape deck or an other external appliance. The volume level can be set to a fixed level or a variable output level controlled by the master volume knob.

23. Input "TEL.Paging": It lets you connect to an auxiliary signal (600 ohms). The input features the "Voice Priority" function, which overrides all other input signals, once an auxiliary message is sent.
24. "Priority" terminal: When short-circuiting these terminals (i.e means of using an electrical switch). The audio signals coming from "AUX1", "AUX2", "CASSETTE" and "TUNER" are attenuated, while the signals coming from the inputs 1-10 remain unchanged.
25. Output terminal for auxiliary loudspeaker: The terminal is meant for the connection of a small external 8 ohm loudspeaker that gets driven by an internal auxiliary power amplifier, providing a nominal output of 1 watt. Only the mixed audio signal coming from "AUX1", "AUX2", "CASSETTE" and "TUNER" are included in the output signal. In addition, the output signal is controlled only by the volume controls of the "AUX1", "AUX2", "TUNER" and music signal level control(4).
26. DC switch: This switch lets you turn the battery supply on or off.

Appendix A: Limited Warranty

Electro-Voice® amplifiers are guaranteed against malfunction due to defects in materials or workmanship for a period of three (3) years from the date of original purchase.

If such malfunction occurs during the specified period, the product will be repaired or replaced (at our discretion) without charge. The product will be returned to the customer prepaid.

Exclusions and Limitations

The Limited Warranty does not apply to: (a) exterior finish or appearance; (b) certain specific items described in the individual product-line statements below, or in the individual product sheet or owner's manual; (c) malfunction resulting from use or operation of the product other than as specified in the product data sheet or owner's manual; (d) malfunction resulting from misuse or abuse of the product; or (e) malfunction occurring at any time after repairs have been made to the product by anyone other than Electro-Voice® Service or any of its authorized representatives.

Obtaining Warranty Service

To obtain warranty service, a customer must deliver the product, prepaid, to Electro-Voice® Service or to any of its authorized service representatives, together with proof of purchase of the product in the form of a bill of sale or receipted invoice. A list of authorized service representatives is available from Electro-Voice® Service at:

12000 Portland Avenue South
Burnsville, MN 55337
Phone: (877) 863-4166

Incidental and Consequential Damages Excluded

Product repair or replacement and return to the customer are the only remedies provided to the customer. Electro-Voice® shall not be liable for any incidental or consequential damages including, without limitation, injury to persons or property or loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Other Rights

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Appendix B: Safety Guidelines

At all times, the amplifier has to be operated under appropriate conditions. This includes choosing an operation location that provides sufficient ventilation and that the device is not exposed to direct sunlight including the direct radiation or reflection from any heat source. When installing the loudspeaker systems choose a location that does not transmit extreme and/or constant vibration or other mechanical oscillation.

Do not take the risk of electro-shock or shock hazard. To reduce the risk of electro-shock, all connections have to be accomplished before it is permissible to connect the amplifier to the main supply. Verify that all external connections are complete and that no short-circuits exist in any of the wiring. The overall sound reinforcement installation has to be in accordance to the laws, regulations, standards, and guidelines that are relevant and applicable in the country/locality where the equipment is going to be operated.

AC Power Supply

This equipment operates from a power source that does not apply more than 244 VAC between the supply conductors or between either supply conductor and ground.

DC Power Supply

A 24V DC power source (i.e. a battery) has to be connected to the terminals (13) that are covered by a protective lid. To reduce the risk of dropping voltage to a minimum and to eliminate the danger of damaging the battery cables by thermal overload, these cables have to be at least 2.5mm in diameter, each. Switching the amplifier on or off is performed through the power switch (6).

Safety Precautions

1. Please read the notes preceded by the symbol with special attention, as they provide important safety information.
2. The power supply voltage of the amplifier has a sufficiently high value to involve the risk of electrical shock; therefore, never install, connect, or disconnect the equipment with the power supply switched on.
3. The metal parts of the equipment are earthed by means of the power cable. If the power socket used to supply power does not have an earth connection, call a qualified electrician who will earth the equipment by means of the terminal.

Safety Precautions (cont')

4. Make sure that the power supply cable of the equipment cannot be trodden on or crushed by objects.
5. There are no parts inside that can be serviced.
6. Make sure that no objects or liquids can get into the amplifier, as this could cause a short circuit.
7. Never attempt to make any repairs that are not described in this manual. Contact your authorized service centers or highly qualified personnel when:
 - The equipment does not function (or functions in an abnormal way).
 - The power supply cable has been seriously damaged.
 - Objects or liquids have got into the equipment.
 - The equipment has been subject to heavy impact.
8. If the equipment is not to be used for long periods of time, switch it off and disconnect the power supply cable.
9. If the equipment gives off any strange odor or smoke, switch it off immediately and disconnect the power from the supply cable.

Technical Specifications

	MA-1212	MA-1206
Power Output (at 1 kHz):	120 Watts	60 Watts
Frequency Response:	50 Hz - 15 kHz, +/-3 dB	50 Hz - 15 kHz, +/-3 dB
Input/Sensitivity/Impedance		
Inputs 1-10 Mic Setting:	0.3 mV/600 ohm (balanced)	0.3 mV/600 ohm (balanced)
Inputs 1-10 Line Setting:	75 mV/47 kohm (balanced)	75 mV/47 kohm (balanced)
Paging:	-20 dBm/600 ohm (transformer isolated)	-20 dBm/600 ohm (transformer isolated)
Power Amp In:	1 V/10 kohm (unbalanced)	1 V/10 kohm (unbalanced)
Aux:	100 mV to 1 V (unbalanced)	100 mV to 1 V (unbalanced)
THD (at rated output):	<1% at 1 kHz	<1% at 1 kHz
Signal-to-Noise Ratio		
Mic:	<52 dB	<52 dB
Aux:	<65 dB	<65 dB
Paging:	<65 dB	<65 dB
Power Amp In:	<90 dB	<90 dB
Line Output Level/Impedance		
Preamp Output:	1 V/1 kohm (unbalanced)	1 V/1 kohm (unbalanced)
Balanced Line Output:	500 mV/47 kohm (unbalanced)	500 mV/47 kohm (unbalanced)
Speaker Outputs:	4, 8, 16 ohm, 25, 70.7, and 100 Volt	4, 8, 16 ohm, 25, 70.7, and 100 Volt
Tone Controls		
Bass:	+/-10 dB at 100 Hz	+/-10 dB at 100 Hz
Treble:	+/-10 dB at 10 kHz	+/-10 dB at 10 kHz
Muting:	40 dB attenuation	40 dB attenuation
Protection:	3 independant Slo-Blo fuses, primary AC and DC	3 independant Slo-Blo fuses, primary AC and DC
Power Dissipation:	390 Watts	200 Watts
Power Supply:	108-132 V AC, 50/60 Hz	108-132 V AC, 50/60 Hz
Dim (H x W x D):	5.9" x 18.9" x 12.6" (150mm x 480mm x 320mm)	5.9" x 18.9" x 12.6" (150mm x 480mm x 320mm)
Net Weight:	26.4 lbs (12.0 kg)	19.8 lbs (9.0 kg)
Shipping Weight:	28.0 lbs (12.7 kg)	21.4 lbs (9.7 kg)

Notes

Notes

U.S.A. and Canada:

For customer orders, contact the Customer Service department at:
800/392-3497 Fax: 800/955-6831

For warranty repair or service information, contact the Service Repair
Department at:
800/685-2606

For technical assistance, contact Technical Support at:
866/78-AUDIO

Specifications subject to change without notice.

All Other International Locations:

952-884-4051 Fax: 952-736-4212

www.electrovoice.com ● Telex Communications, Inc. ● www.telex.com

Printed in U.S.A

© Telex Communications, Inc. 10/2002

Part Number 38110-190 Rev A